		GLP JDC-1 RGB - NORM Mode	23 DMX (Channel	(1			
Channel	Function	Description	% Range	DMX	<u>Comments</u>			
1	Tiltcoarse	0 190°	0 - 100%	0255				
2	Tilt-fine	High- Pos High- Pos + 1.2° (16 Bit)	0 - 100%	0255				
3	Beam Dimmer Beam duration	Beam flash intensity	0 - 100%	0255				
5	Beam rate	Beam flash duration 7→ 650 ms Beam flash rate Slow (0.289) → fast (16.67 Hz)	0 - 100%	0255				
	Beam FX Shutter	Shutter Closed	0 - 5.5%	015				
		Random strobe - Slow to Fast	6 - 18.5%	1647				
		Fade on, Snap off, Random - Slow to Fast	19 - 31%	4879				
6		Snap on, Fade off, Random - Slow to Fast Fade on, Fade off, Random - Slow to Fast	32 - 43% 44 - 56%	80111 112143				
		Strobe with b/o pause	63 - 77%	144199				
		Shutter Open	78 - 94%	200239				
		Shutter Open	95 - 100%	240255				
	Special / Control	No Function	0- 5% 20 - 22.5%	050	(liand uplue for more than 20			
		FX/Pattern Color Priority ON FX/Pattern Color Priority OFF	20-22.5%	5156 5764	(Hold value for more than 3s (Hold value for more than 3s			
		No Function	26 - 39%	6599				
		Change PWM Frequency (Hold value for more than 3s	39.2-40.0%	100102	adjust PWM frequency from 582 Hz			
			40.4-41.2%	103105	adjust PWM frequency from 583 Hz			
			41.6-42.0% 42.4-43.1%	106107 108110	adjust PWM frequency from 584 Hz adjust PWM frequency from 585 Hz			
			43.5 43.9%	111112	adjust PWM frequency from 586 Hz			
			44.3 -45.1%	113115	adjust PWM frequency from 587 Hz			
			45.5-46.3%	116118	adjust PWM frequency from 588 Hz			
			46.7-47.1%	119120 121123	adjust PWM frequency from 589 Hz adjust PWM frequency from 590 Hz			
			47.5-48.2% 48.6-49.0%	121123 124125	adjust PWM frequency from 590 Hz adjust PWM frequency from 591 Hz			
			49.4-50.2%	126128	adjust PWM frequency from 592 Hz			
			50.6-51.4%	129131	adjust PWM frequency from 593 Hz			
			51.8-52.2%	132133	adjust PWM frequency from 594 Hz			
			52.5-53.3% 53.7-54.1%	134136 137138	adjust PWM frequency from 595 Hz adjust PWM frequency from 596 Hz			
			54.5-55.3%	137138	adjust PWM frequency from 597 Hz			
			55.7-56.5%	142144	adjust PWM frequency from 598 Hz			
_			56.9-57.3%	145146	adjust PWM frequency from 599 Hz			
7			57.6-58.4%	147149	adjust PWM frequency from 600 Hz			
			58.8-59.2% 59.6-60.4%	150151 152154	adjust PWM frequency from 601 Hz adjust PWM frequency from 602 Hz			
			60.8-61.6%	155157	adjust PWM frequency from 603 Hz			12 + 12 Pixel
			62.0-62.4%	158159	adjust PWM frequency from 604 Hz		Normal Mode	Mode
			62.7-63.5%	160162	adjust PWM frequency from 605 Hz			
			63.9-64.3% 64.7-65.5%	163164 165167	adjust PWM frequency from 606 Hz adjust PWM frequency from 607 Hz			
			65.9-66.7%	168170	adjust PWM frequency from 608 Hz			
			67.1-67.5%	171172	adjust PWM frequency from 609 Hz			
			67.8-68.6%	173175	adjust PWM frequency from 610 Hz			
			69.0-69.4% 69.8-70.6%	176177 178180	adjust PWM frequency from 611 Hz adjust PWM frequency from 612 Hz			
			71.0-71.8%	181183	adjust PWM frequency from 613 Hz			
			72.2-72.5%	184185	adjust PWM frequency from 614 Hz			
			72.9-73.7%	186188	adjust PWM frequency from 615 Hz			
			74.1-74.5% 74.9-75.7%	189190 191193	adjust PWM frequency from 616 Hz adjust PWM frequency from 617 Hz			
			76.1-76.1%	194194	adjust PWM frequency from 618 Hz			
			76.5-77.3%	195197	adjust PWM frequency from1200 Hz			
			77.6-78.4%	198200	adjust PWM frequency from 2400 Hz			
		No Function	79 - 97%	201247				
8	Color Dimmer	Reset all fixtures (Hold for more than 0.5 seconds) Color Plate intensity	98 - 100% 0 - 100%	248255 0255				
9	Color duration	Color flash duration $7 \rightarrow 650 \text{ ms}$	0 - 100%	0255				
10	Color rate	Color flash rate Slow (0.289) → fast (16.67 Hz)	0 - 100%	0255				
11	Color FX Shutter	Shutter Closed	0 - 5.5%	015				
		Random strobe - Slow to Fast	6 - 18.5%	1647				
		Fade on, Snap off, Random - Slow to Fast Snap on, Fade off, Random - Slow to Fast	19 - 31% 32 - 43%	4879 80111				
		Fade on, Fade off, Random - Slow to Fast	32 - 43% 44 - 56%	112143				
		Strobe with b/o pause	63 - 77%	144199				
		Shutter Open	78 - 94%	200239				
12	Plate red	Shutter Open	95 - 100%	240255				
12	Plate green	Red Intensity Green Intensity	0 - 100%	0255				
14	Plate blue	Blue Intensity	0 - 100%	0255				
15	FX Crossfade		0 - 100%	0255				
16	Pattern Color Movement		0 - 100%	0255				
17 18	Pattern Select Color Pattern BeamMovement	1	0 - 100%	0255				
19	Pattern Beamwovernent Pattern Select Beam		0 - 100%	0255				
20	Master Pix intensity	Color Background Intensity (Color Set 2,	0 - 100%	0255				
21	red pix 1 intensity	Background (Color Set 2 , without pattern)	0 - 100%	0255				
22 23	green pix 1 intensity	Background (Color Set 2, without pattern)	0 - 100%	0255	<u> </u>			
23	blue pix 1 intensity	Background (Color Set 2, without pattern)	0 - 100%	0255				